


T2-Oxide 1150C (486)


2022-01-03

T2-900S, 23 min 30 sec, 950C, wet oxidation

Per Wehlin

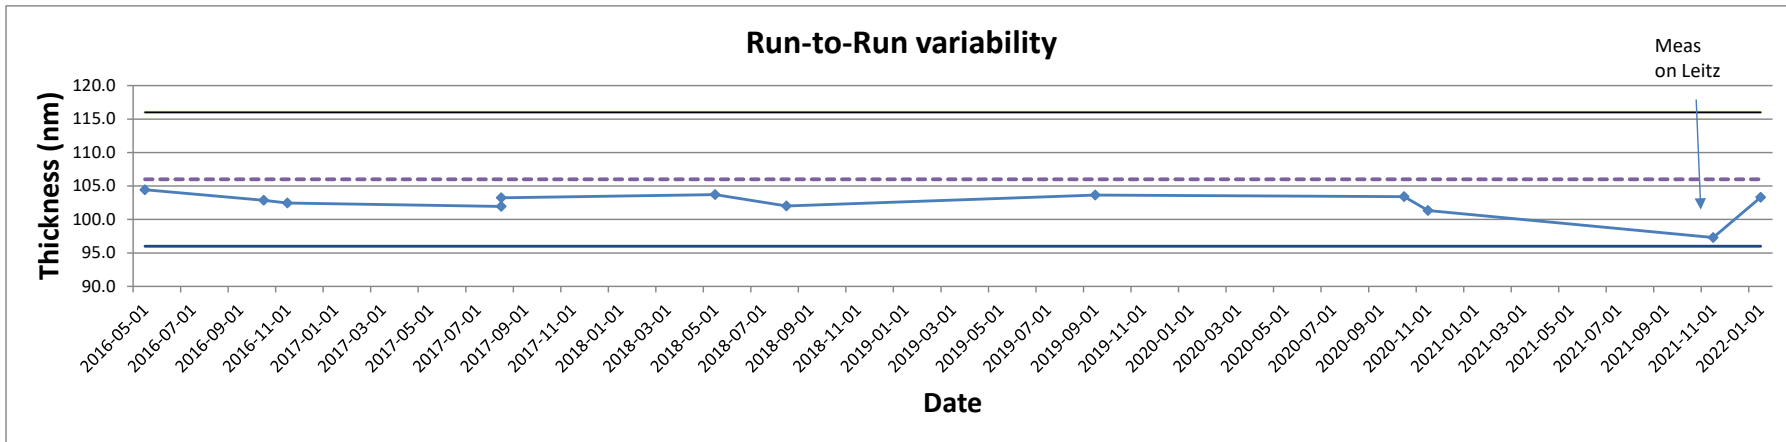

LCL: 96 UCL: 116 CL: 106

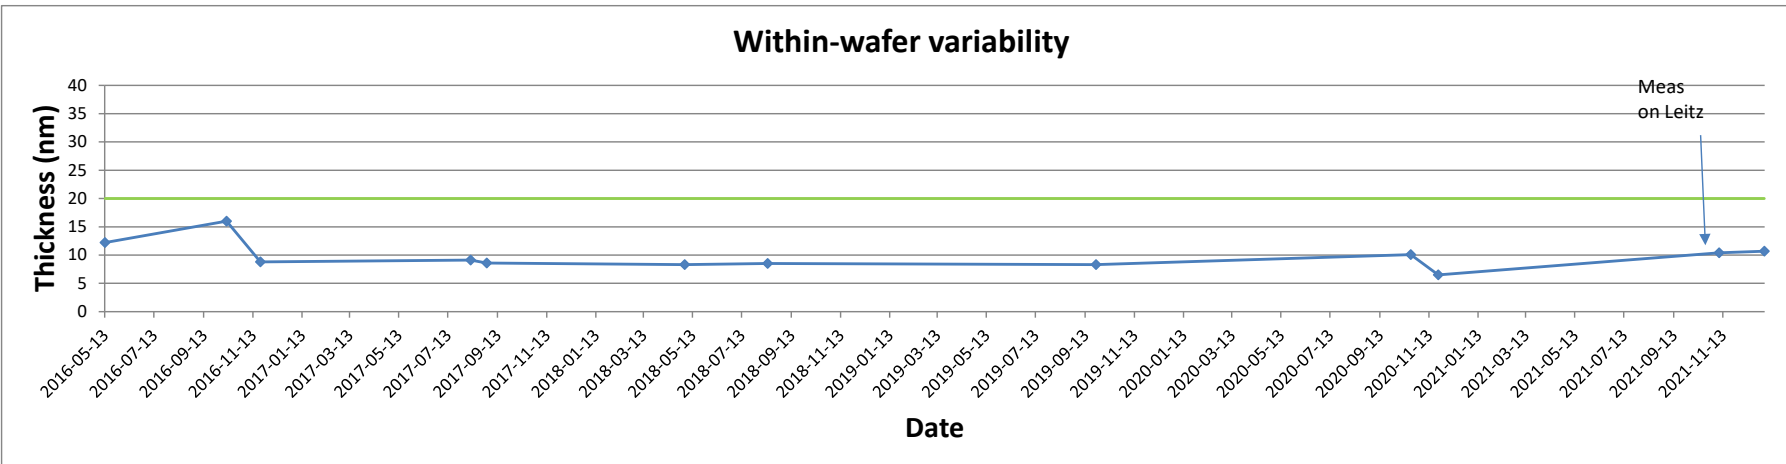

T2-Oxide 1150C (486)

The last 12 values

Meas	Date	Ave	Range	CL (target)	LCL x-bar	UC Lx-bar	UCL R-bar	Comment
1	2022-01-03	103.3	10.7	106	96	116	20	
2	2021-11-08	97.3	10.4	106	96	116	20	Meas on Leitz
3	2020-11-24	101.3	6.5	106	96	116	20	
4	2020-10-21	103.4	10.1	106	96	116	20	
5	2019-09-26	103.7	8.3	106	96	116	20	
6	2018-08-14	102.0	8.5	106	96	116	20	
7	2018-05-03	103.7	8.3	106	96	116	20	
8	2017-08-30	103.2	8.6	106	96	116	20	
9	2017-08-10	102.0	9.1	106	96	116	20	
10	2016-11-22	102.5	8.8	106	96	116	20	
11	2016-10-11	102.9	16	106	96	116	20	
12	2016-05-13	104.4	12.2	106	96	116	20	